




Art Deco Vintage Ceiling Light

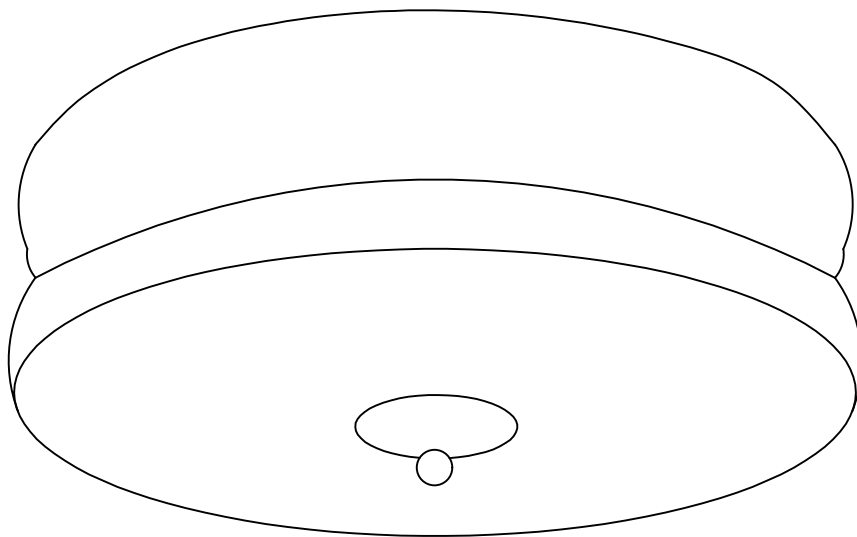

1

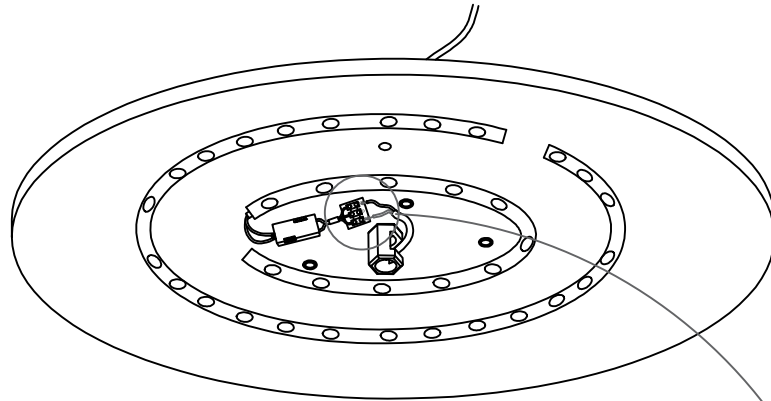


First lock the main line into the built-in LED terminal

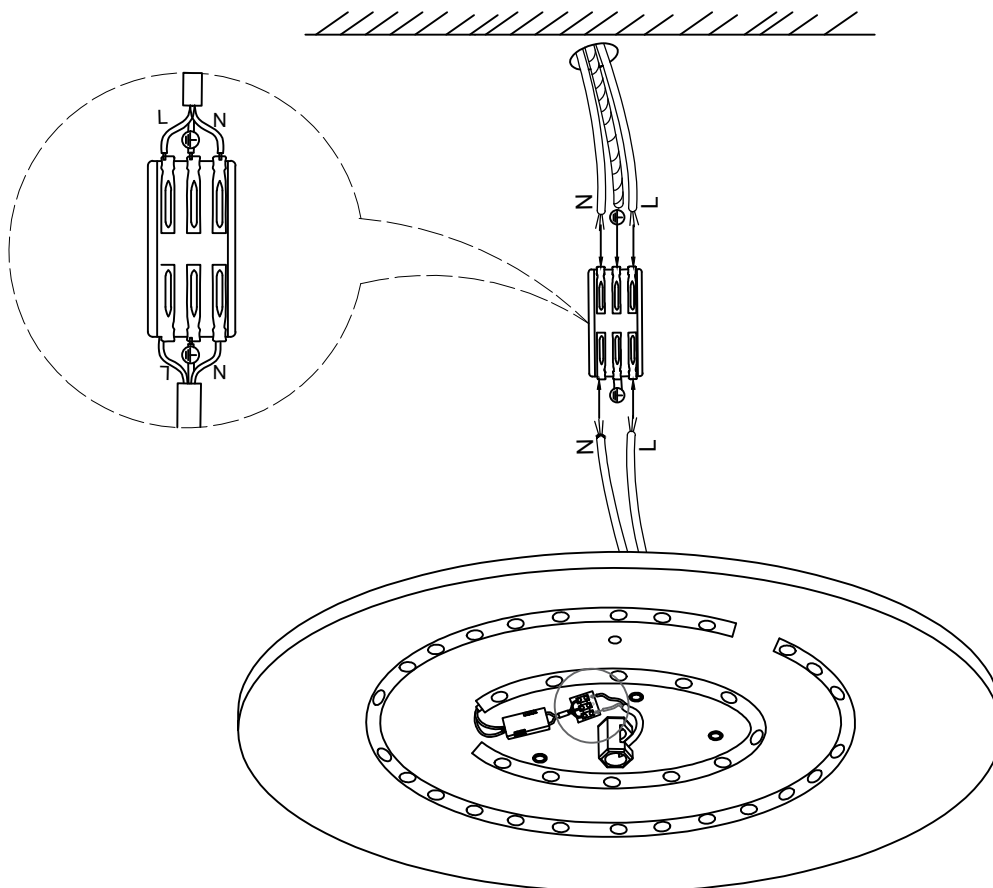

The wires in the home are connected to the wires in the lamps through the wire terminals

2

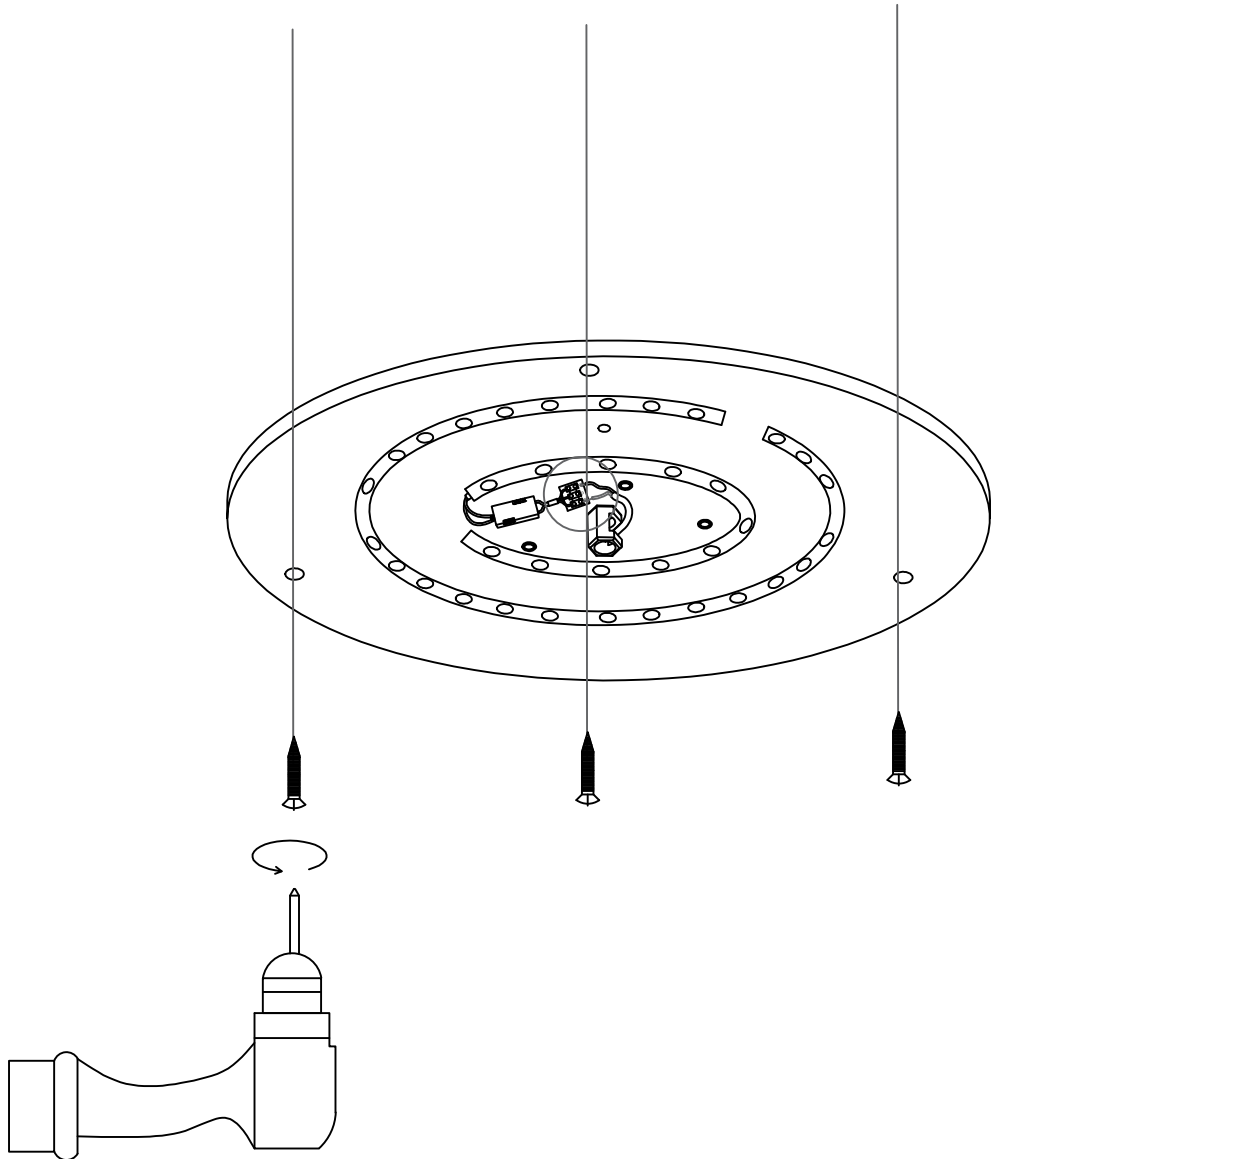

After the wires are connected, use screws to lock the lamp body to the ceiling.

3

